



# 1080P Smart Battery Doorbell

Quick Start Guide - EN



Model: HGBVD-853

iGET HOMEGUARD 2020

✉ [www.iget.eu/cs/helpdesk-centrum-cs](http://www.iget.eu/cs/helpdesk-centrum-cs)


☐ <https://helpdesk.intelek.cz>



## What's included




Doorbell

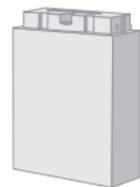

Battery box



USB cable

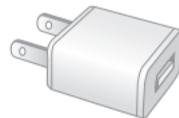

Power Adapter




Double-sided tape



Pin





Quick Start Guide

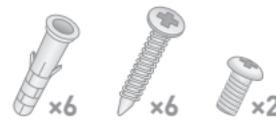


Screws(3 kinds)

## Parts & Function

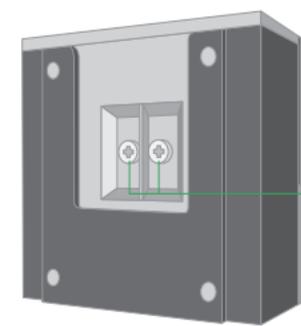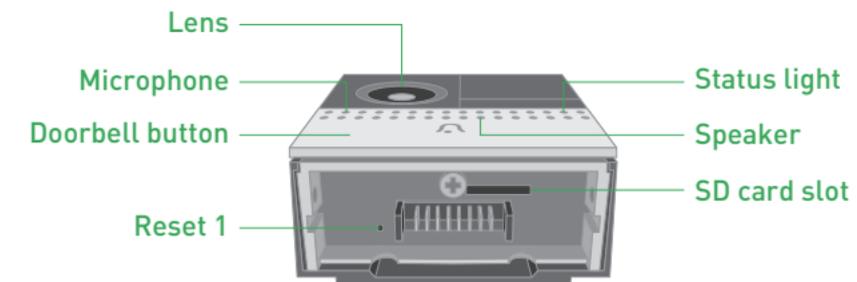

Doorbell

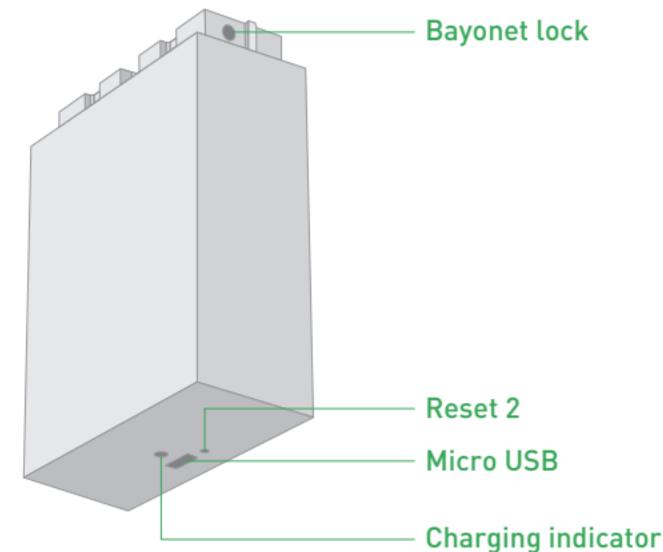

Battery box

## Description


Doorbell	Power Port	AC12~24V	
	Doorbell button	Press the button to activate the doorbell	
	Status light	Solid red light on:	the camera is turning on or malfunctional
		Blinking red light:	awaiting WiFi connection (slowly blinking) connecting the WiFi (quickly blinking)
		Blinking blue light:	currently connecting
	Solid blue light on:	the camera runs correctly	
	Microphone	Captures sound for your video	
	SD card slot	Support local SD Card storage (Max.128G)	
Reset1	Press and hold on for 5 seconds with pin to reset the doorbell		

Battery box	Mini USB	DC5V±10%,USB power supply	
	Charging indicator	Solid red indicator on:	battery is charging
		Solid blue indicator on:	charging completed
	Reset 2	Tap reset button for 5 seconds to factory reset	
	Bayonet lock	Lock the battery box through bayonet lock	
	Battery capacity	6700mAh (Two 18650 lithium-ion batteries)	


## Installation 1: Battery power supply mode




1 Remove the bracket from doorbell.

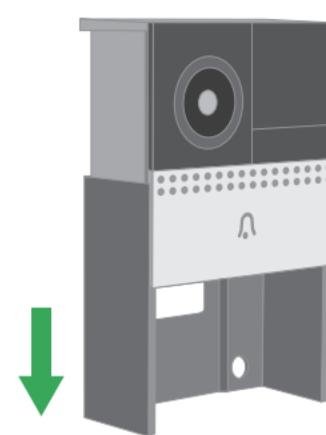

2 Fix the bracket on the wall with screws and install the doorbell into the bracket.

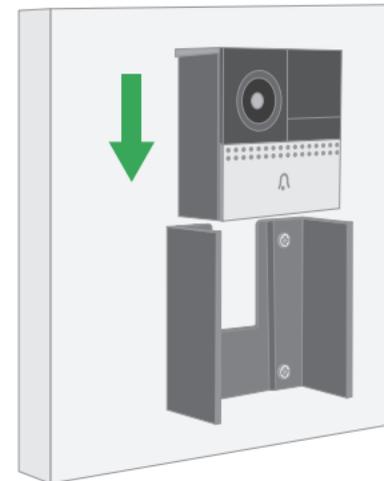


3 Insert the battery compartment into the doorbell.

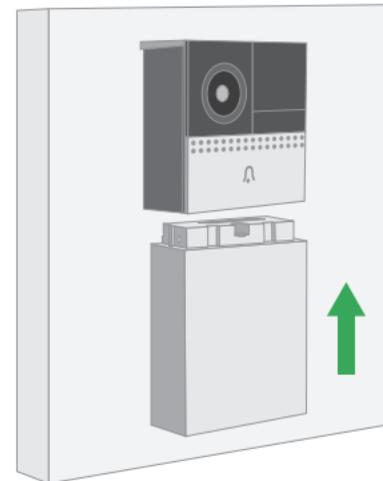


## Installation 2: AC Power supply mode


1 Remove the bracket from doorbell

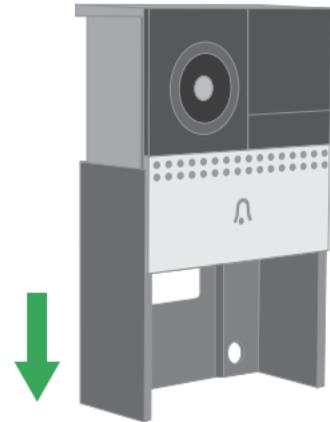


2 Fix the bracket on the wall with screws & connect the AC power with your wires

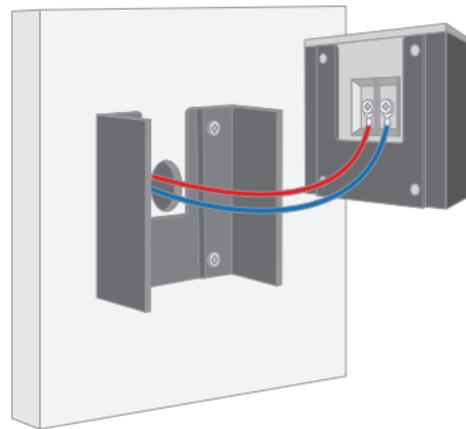

3 Install the doorbell into the bracket


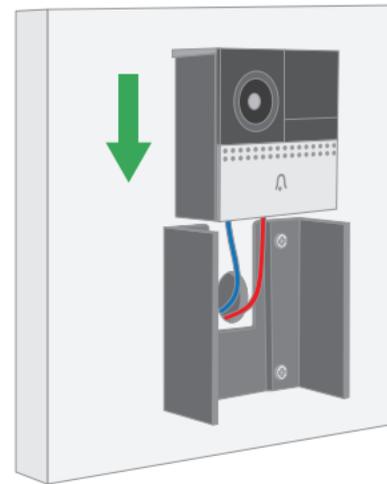


4 Insert the battery compartment into the doorbell.

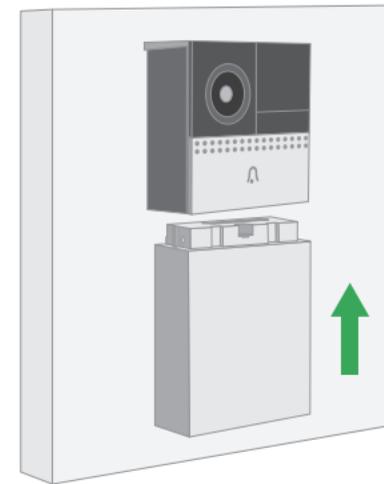

### Double-sided tape mode

Attach the double-sided adhesive tape to both sides of the bracket then keep the doorbell close to a clean flat.

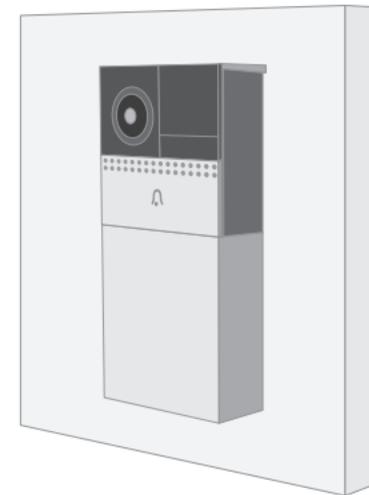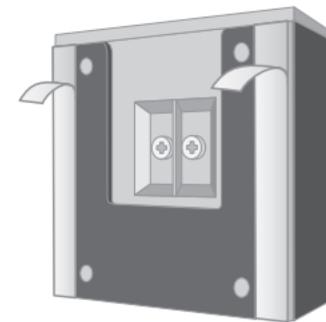

## Step 1 Get the App

For the best experience, download the **Homeguardone** app for your smartphone by scanning the QR code below or searching for "Homeguardone" in the app store or Google play.



## Step 2 Set up router

This product only supports 2.4GHz frequency band router, does not support 5GHz frequency band router, please set the relevant parameters of the router before WiFi configuration, WiFi passwords do not include special characters such as ~!@#\$%^&\*(). When the device is configured in WiFi, the mobile phone and device are as close as to the router, which can speed up the configuration of the device.




### Notices before adding the device:


1. Please follow the instructions and make sure the password is inputed correctly.
2. One device can only be added with one App account, if the device has been added with another account already, then it can't be added to any another account again.

## Step 3 Account Register

- 1 Open the Homeguardone App, click '**SIGN UP**', input a valid email address and select 'registration means agreement with user agreement privacy agreement' then click '**NEXT**'.


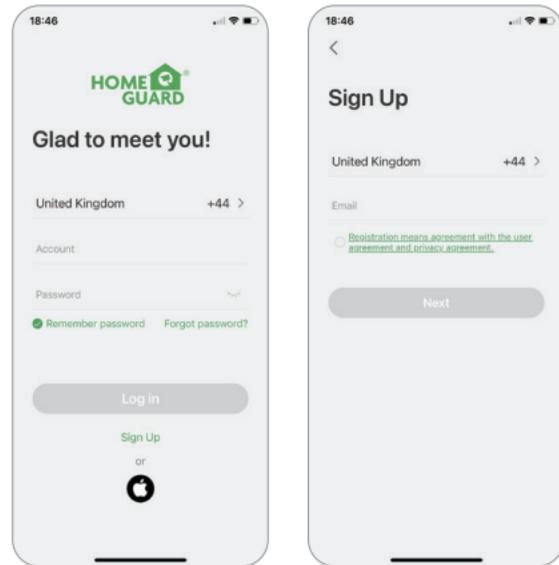


- 2 Create a nickname and login password, click "**Done**".  
**Note:** Make sure your router, device, and mobile phone are nearby.

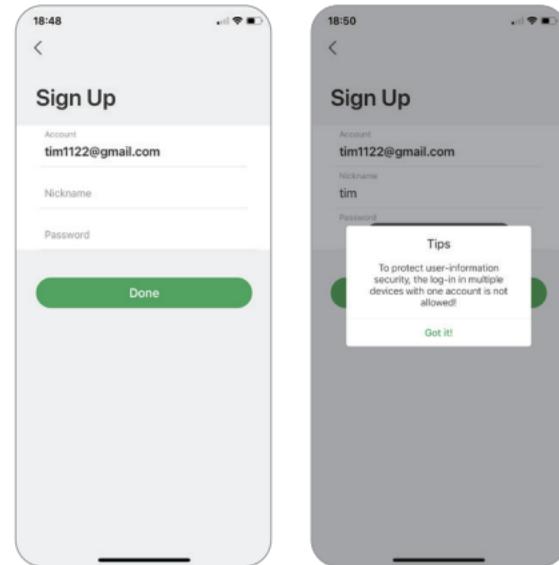


## Step 4 QR Code Configuration


- 1 Open the Homeguardone App, click '+', and select the type of device to add.
- 2 Please confirm the red LED light blinks, if not, please reset the device and wait for a flashing RED indicator light, click '**Next**'. Then input the wireless password, click '**Next**'.

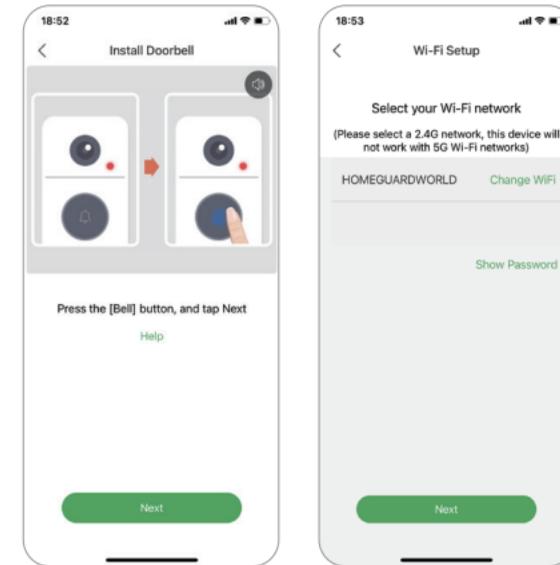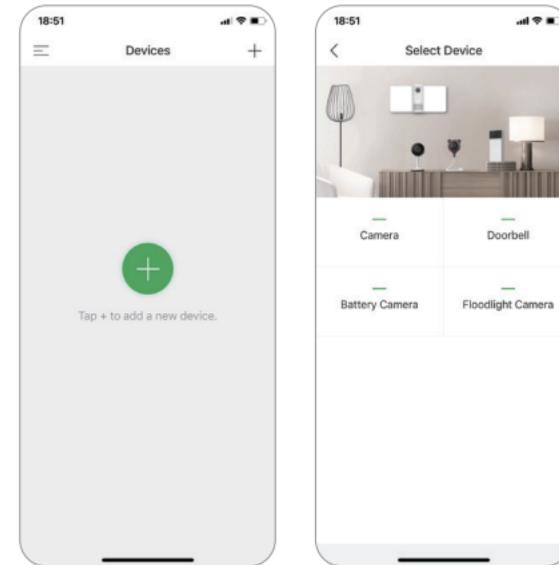


- 3 The device is scanning the QR code at a distance of 15~25cm, click 'Next' to view the scanning mode. After the device scans successfully, click 'Next', the App will automatically adds the scanned device.

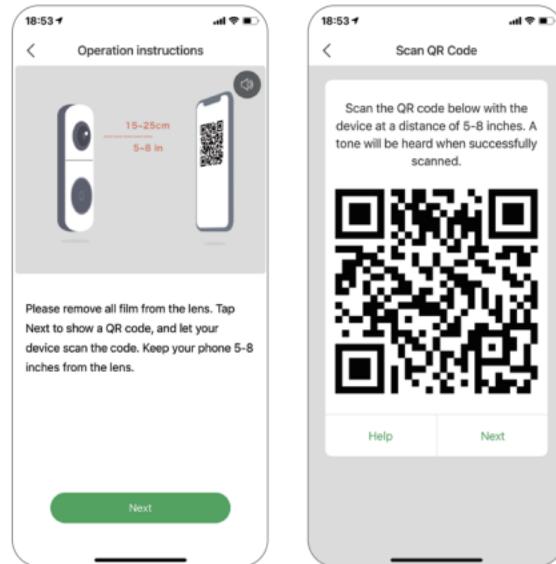

- 4 After the configuration is completed, name the camera & complete the guide of camera installation (Remind: long press the image to be previewed to remove the device, add device again to reset the device)

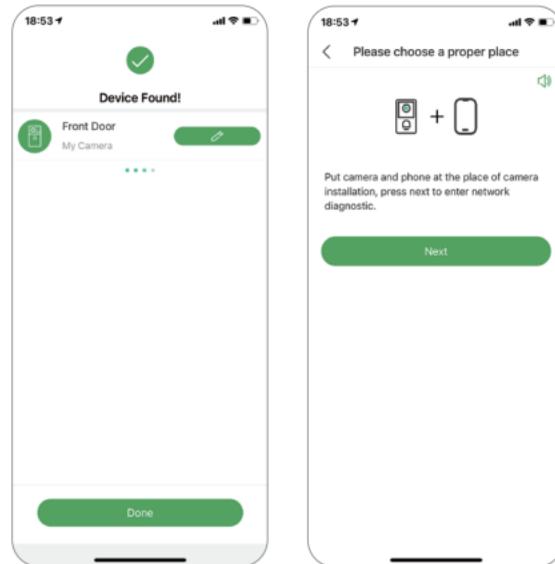

## Live View

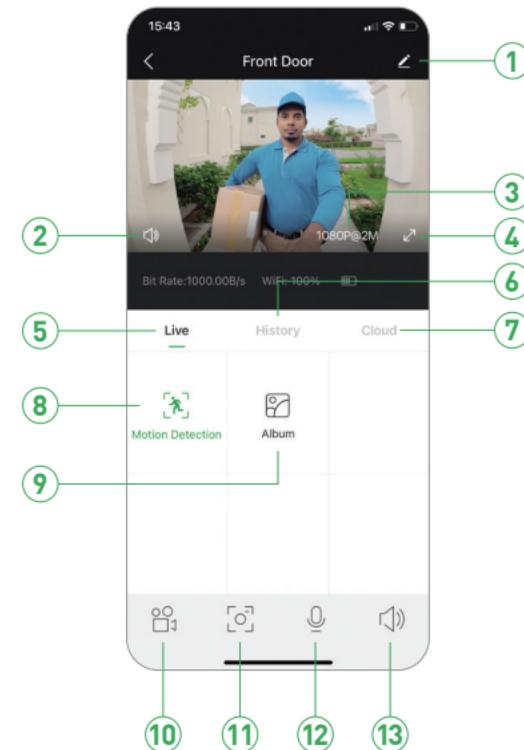

1	<b>Setting</b>	Tap to access camera setting
2	<b>Mute / Unmute</b>	Tap to hear the camera or unmute
3	<b>Resolution</b>	Tap to change video quality levels
4	<b>Full screen</b>	Click to view in full screen
5	<b>Live view</b>	Tap to the live view interface
6	<b>History</b>	Tap to play the recorded video in the memory card
7	<b>Cloud</b>	Tap to play the recorded video in the cloud
8	<b>Motion Detection</b>	Turn the motion detection on or off
9	<b>Album</b>	Browse videos or images recorded locally
10	<b>Record</b>	Saves video clip from a live video
11	<b>Capture</b>	Saves images captured from a live video
12	<b>2-way talk</b>	Activate the microphone to enable 2-way talk
13	<b>Mute / Unmute</b>	Tap to hear the camera or unmute

## FAQ

### Q: The device cannot be previewed properly?

A: Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

### Q: Why is it still in the list of devices after resetting?

A: The reset device only resets the network configuration of the camera, but cannot change the configuration on the App, remove the camera, and must be deleted by the App.

### Q: How to cut the camera network to another router?

A: First remove and reset the device on the App and then configure the device again by the App.

### Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

### Q: Why I can't get the notifications with my cell phone App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

## Specifications



Item	Description
Camera	1080p Full HD Video Recording, 145° Wide Angle Lens
Resolution	1920 × 1080
Video	H.264, 1920 × 1080@15fps
Audio	Built-in Microphone & Speaker
Image Sensor	1/2.9" 2 Megapixel CMOS Sensor, f=2.4mm, F=2.0
Battery	Rechargeable battery-powered, 6700mAh
PIR Detection Rangle & Angle	5m (.Max), 100°
Motion Detection	PIR motion sensor, Instant & accurate alerts
Night Vision	Up to 16ft/5m
Storage	Built-in microSD Socket (max 128 GB), Cloud Storage
Power Input	Optional DC 5V/1A, AC 12V-24V
Wireless	2.4G WIFI (IEEE802.11b/g/n)
Security Protocols	64/128-bit WEP, WPA/WPA2, WPA-PSK/WPA2-PSK
Dimensions / Weight	58mm × 130mm × 26mm (with battery box) / 225g
Ingress protection	IP54
Operating temperature	-20 °C to 50 °C